

# W9596 Magnetic Jump and Reach Board

## Installation and Use Instructions

### Contents:

1. Top panel with graphics and pull pin, slotted back panel and 3 magnetic spots.

### Set-Up:


1. Remove from box, lay on flat surface.
2. Grasp and lift pull pin.
3. With the pull pin in the up position, slide the panel up and off of the bottom panel.
4. Attach the slotted back panel to a wall. There are 4 holes in the corner of this panel where screws can be inserted. The types of screws and additional hardware required to securely attach this panel to the wall will vary with the type of wall. Screws and hardware are not included. Note that the bottom of the back panel has a lip that extends out perpendicularly from the wall. Be sure to locate this end of the back panel closer to the floor.
5. Once the back panel is secured to the wall, the front panel can be repositioned over the back panel by pulling the pin on the top panel out and sliding it the top panel down over the bottom panel.
6. The location of the top panel can be adjusted for each jumper, by pulling the pin outward and sliding the top panel up or down as needed.

### Suggested method for determining the height at which to attach the back panel to the wall.


The height at which this back panel is attached to the back wall will vary with the age and jumping ability of the students. The height of the front panel can be adjusted upward by 29". Conduct some preliminary testing of a group to determine the approximate average height to which they can jump and reach. From that average subtract 18" and use that height as the height at which the very bottom of the back panel should be set. Mark the location of the 4 attachment holes on the wall and then attach the back panel as described above.

This method should allow for a variation of about 18" below average and by sliding the panel upward when required, accommodate heights up to 47" above average.


As Received

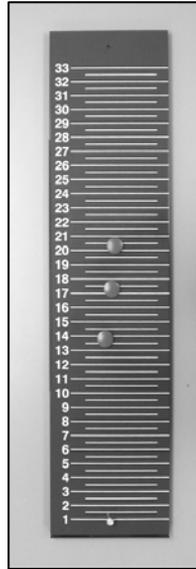

Pull Pin in Down Position

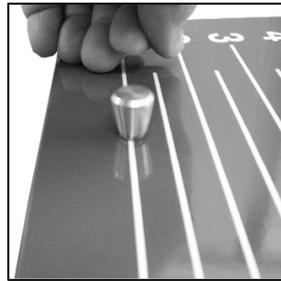


Pull Pin in Down Position (as seen from the bottom)

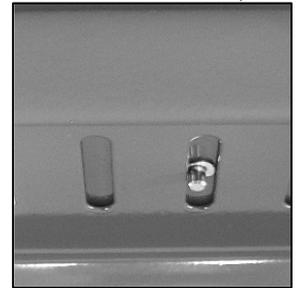

Pull Pin in Up Position



Pull Pin in Up Position (as seen from the bottom)

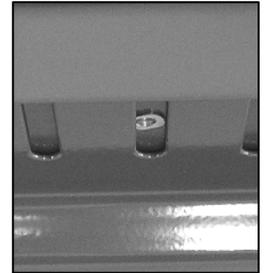

Front & Back Panels Separated



Attach back panel to wall at the 4 corners

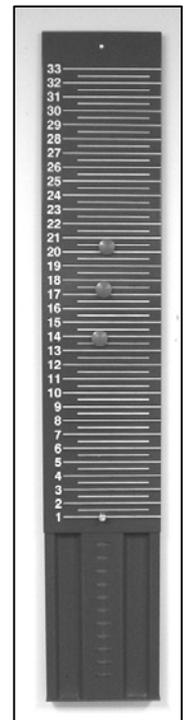
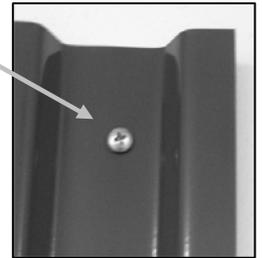
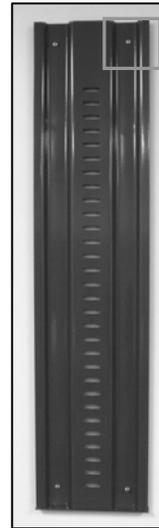


Image with top panel extend up about 13" up from its lowest position