


# CE MEGAFONO ER-332.S.W

## Instrucciones de Operacion:

Al hacer un anuncio, presione la tecla indicada en el dibujo. Dirija el parlante hacia el lugar que desea hablar y hágalo a través del micrófono. Ajuste el control de volumen para que el sonido sea óptimo.

para realizar un silbido y hacer funcionar la sirena: Siga las instrucciones que se detallan en los siguientes dibujos.

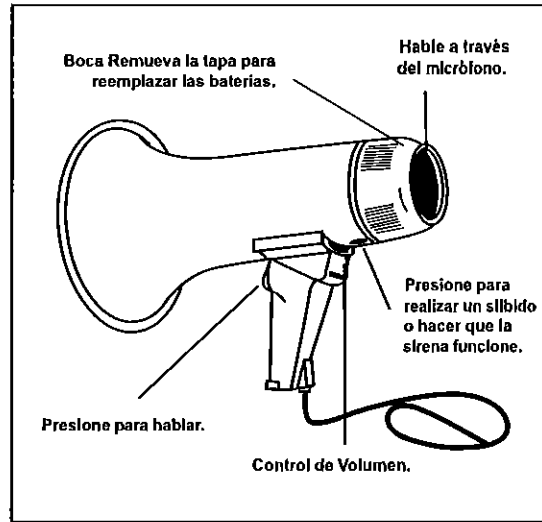

Para ajustar el volumen




Para hacer un anuncio




Para hacer un silbido o hacer funcionar la sirena


**Cambio de baterias:**  
Empuje y presione para aflojar la tapa

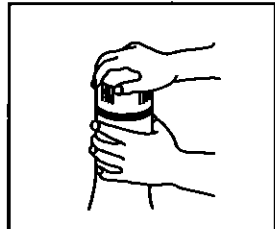

Retire el porta-baterias

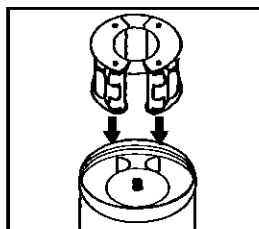

Coloque Las baterias

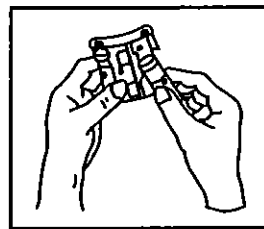

## ESPECIFICACIONES:



|                           |   |
|---------------------------|---|
| Allmentación              | Tamaño AA (UM-3) x8 (DC 10V)                    |
| Consumición de la batería | 15 horas (uso Intermitente)                     |
| Rango de audición         | 0.9km (área suburbana) 0.3km (área de ciudad)   |
| Dimensiones y Peso        | 190mm de diámetro - Longitud 320mm - Peso 0.9kg |

# CE MEGAPHONE ER-332.S.W


## Operating instructions

### When making announcement:

- 1 Hold the megaphone at the grip, and press the power on/off switch back with your index finger.
- 2 Position the speaker opening mouth towards the object, and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak with clear voice.
- 3 Turn the sound volume control equipped on the back of the grip, and adjust the sound level to Optimum without causing howl.

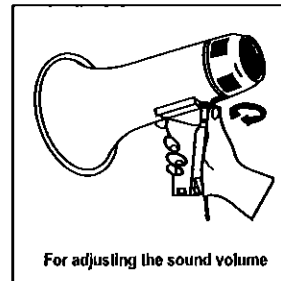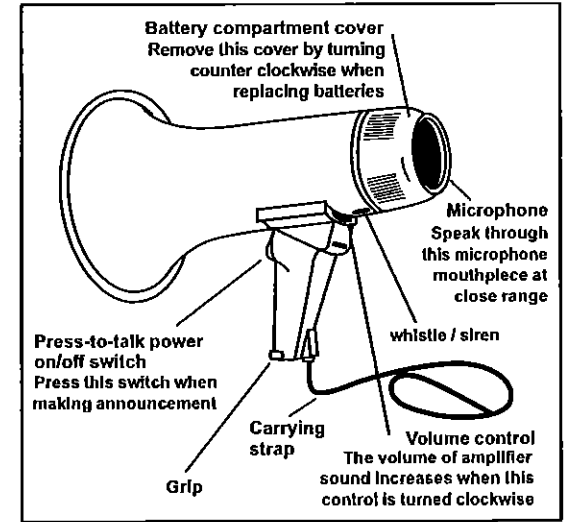


For adjusting the sound volume

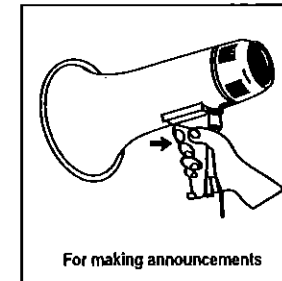

For making announcements


### Battery loading

- 1 Loosen the screwed mouth equipped on the back of the body by turning it fully counter clockwise.
- 2 Remove the battery case and put in eight type AA (UM3) batteries, observing correct polarity.
- 3 After putting the batteries in, insert the battery case into the battery compartment of the megaphone with correct polarity.
- 4 Then tighten the mouth fully.

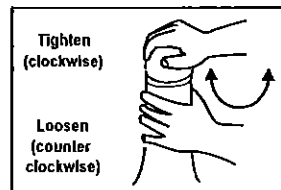


Tighten (clockwise)

Loosen (counter clockwise)

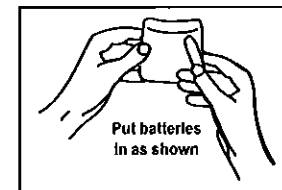

Put batteries in as shown

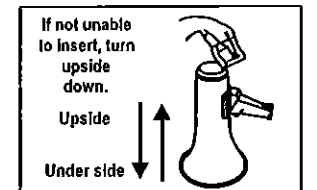

If not unable to insert, turn upside down.

Upside

Under side

## Cautions

- 1 Be sure to put the batteries with correct polarity.
- 2 When the megaphone is not in use for a long period, remove the batteries.
- 3 Drained batteries do not give sufficient sound volume. Replace the batteries at regular intervals.

## Technical specifications

|                            |  |
|----------------------------|--|
| Power source               | Type AA (UM-3) x 8 (DC 12V)                      |
| Battery consumption        | 15 hours (intermittent use)                      |
| Distance range             | 0.6km (quiet suburban area)<br>0.3km (city area) |
| Dimensions                 | Mouth diameter: 190mm<br>Length: 320mm           |
| Weight (without batteries) | 0.9kg  |