

General Wood Instructions

Sanding

The rule of sanding is "Never across the grain".

1. Do not tear sandpaper. If you do, the ragged edges will often scratch the wood surface.
2. For flat surfaces, wrap a piece of sandpaper around a block of wood or use a store bought holder. Start with a coarse grade of paper and finish with a fine grade of paper(not included).
3. Be consistent. Do not sand one area with fine and another with coarse grade.

Staining

1. Be sure the wood surface is smooth and clean. Stains can accentuate any roughness or scratches of cross grain sanding. Wipe off any dirt or dust with a soft cloth.
2. A base coat of sealer/primer and a light sanding before applying stain will insure a uniform stain.
3. Apply stains in one direction following the wood grain. Use a soft brush or foam brush. Let the stain penetrate the wood, then wipe off excess stain with a soft cloth.
4. If stain looks too dark, dampen the cloth with water/thinner and wipe until you achieve the desired color. If stain is too light, let dry, then apply another coat of stain and wipe off.

Finishes

1. Outdoor projects may be finished with polyurethane or varnish.

These are toxic and must be used in a well ventilated area. Indoor projects may be finished with decoupage or left unfinished.

Safety First!

This Product May Contain Silicon Gel Packets.
REMOVE PRIOR TO USE!

Sailboat Pk/12 Item# WD1086

S&SWorldwide

CALL TOLL-FREE 1-800-243-9232

or **Mail Your Order** to: S&S Worldwide
PO Box 513

Colchester, CT 06415-0513

FAX #: 1-800-566-6678

Customer Service: 1-800-937-3482

Internet home page address: <http://www.ssw.com>

Email address: service@ssww.com

Item No. WD1086

Made in China

Sailboat Pk/12

PLEASE READ ALL INSTRUCTIONS BEFORE STARTING



- Precut Wooden Parts
- Dowels
- Craftsticks
- Sandpaper
- Sail Pattern
- Instructions

YOU WILL NEED...



Protected Work Surface
Soft Cloth Paint or Stain
Brushes Wood Glue
Ruler Pencil
Paper for Sail Scissors

PREP TIME: 5 MIN

**PROJECT TIME: 40 MIN
plus drying time.**



WARNING:

CHOKING HAZARD - Small parts. Not intended for children under 3 years.

SUFFOCATION HAZARD - To avoid danger of suffocation, keep plastic bags away from babies and children. Do not use bags in cribs, carriages, or playpens.


S&SWorldwide



Product Instructions:

- 1 a. Sand all wood parts until smooth. Wipe off excess dust with a soft cloth. Test fit the dowel into the hole in the mast support. Sand the end of the dowel if necessary until it fits into the hole easily.
 - b. Paint or stain as desired. Let dry 30 minutes.
- 2 a. Squeeze a small amount of glue into the hole in the mast support. Insert the end of the dowel into the hole to make the mast.
 - b. Apply glue to the bottom of the mast support. Center the mast support on the shaped boat, glue side down. Let dry 10 minutes.
- 3 Apply a small amount of glue to one long side of the rudder support. Place the rudder support, glue side down, across the width of the boat, 1/4" from the back end. Let dry 10 minutes.
- 4 a. Apply glue to one flat side of the craftstick 1/2" up from the end.
 - b. Press the glued end of the craftstick to one side of the mast about 1/4" up from the mast support to make the rudder. Rest the other end of the craftstick on the rudder support. Let dry 60 minutes.
- 5 Cut out a sail pattern. Place the pattern on your paper. Trace around the pattern with the pencil. Cut out the sail.
- 6 a. Use a pencil to make a hole in the sail about 1" down from the top point.
 - b. Cut a small notch in the bottom of the sail so it fits around the lower part of the mast.
 - c. Cut a slit in the bottom of the sail so it slips onto the rudder. Attach the sail to the mast and rudder as shown in Figure A.

 
FIGURE A

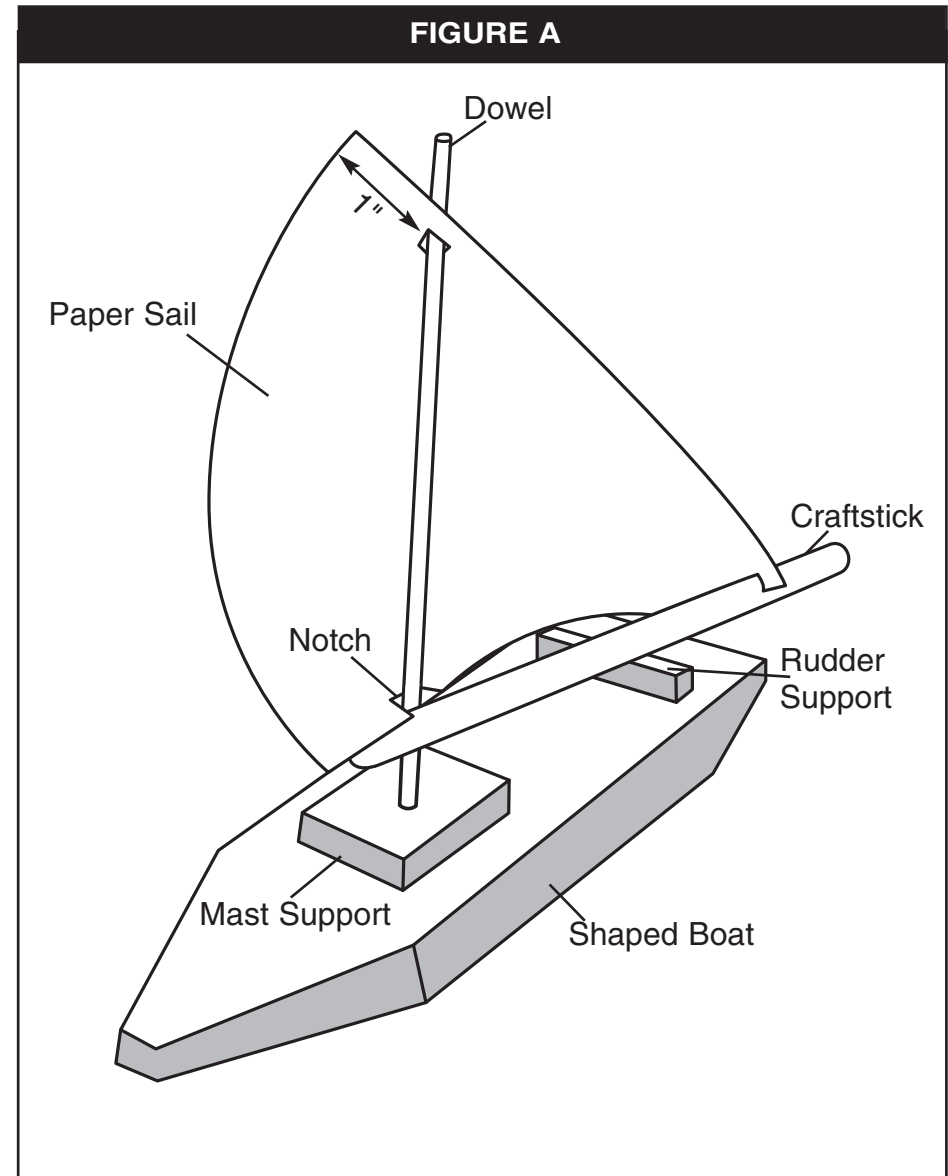

WD1086
PATTERN

TOP

 BOTTOM

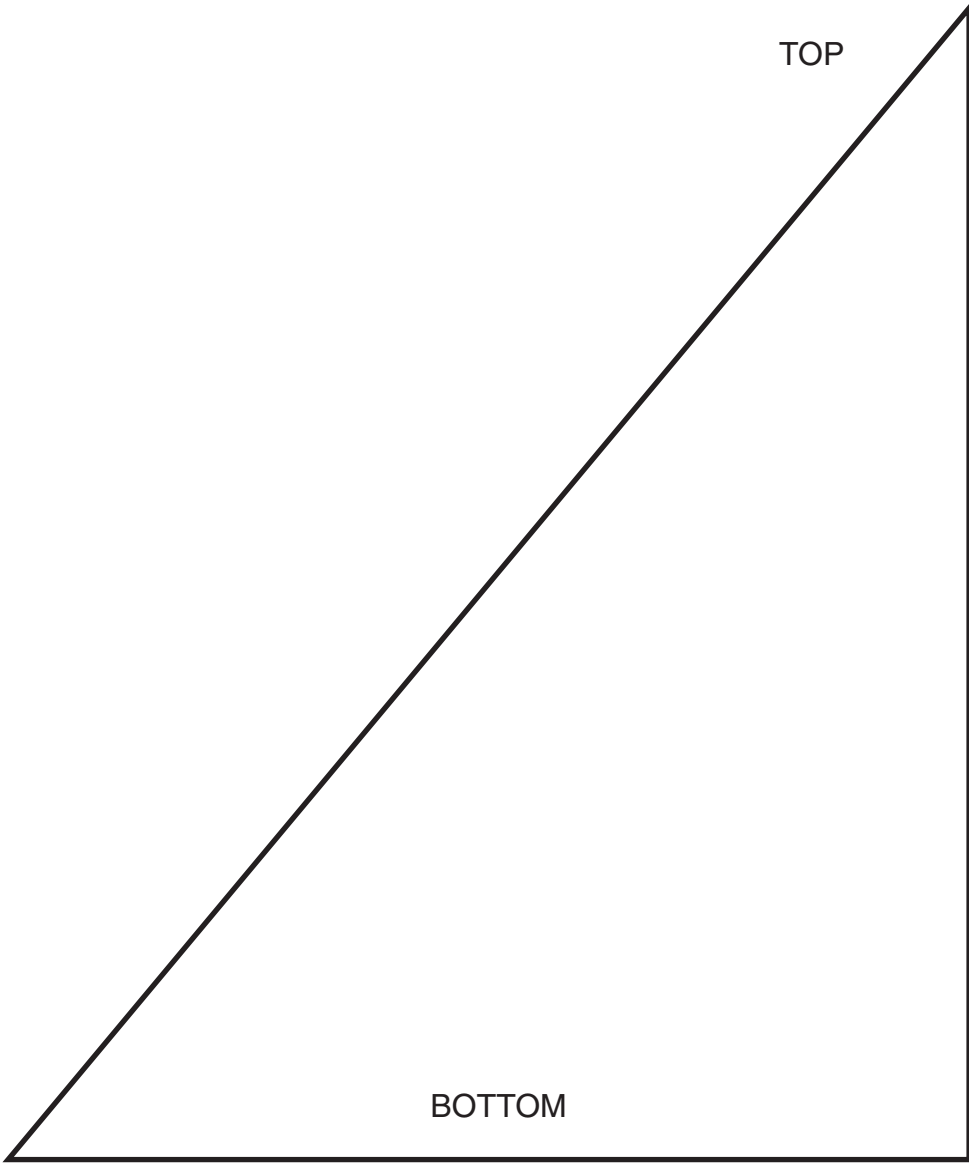

WD1086
PATTERN

TOP

BOTTOM

