

ShockWave III User Manual

All Rights Reserved Evolution Tablet 2013

Preface

Thank you for choosing our Evolution Tablet. The device operating on Google Android system. In addition to the general functions, a variety of useful features and services including music playback, camera, sound recording, 360 degree G-sensor, WIFI, web browsers, email, etc... In addition, the open Android platform offers abundant applications, adding value to tablet experience to satisfy all kinds of needs.

Note: When on "YOUTUBE" If you press their PLAY video button and it doesn't play, scroll down on right side and press the "HQ" button that will play the video.

Charging Battery

1. Connect one end of the AC wall charger to your device.
2. Plug the AC wall charger to the wall outlet to start charging.

Note: Please use the in-box AC wall charger to charge the battery. Battery life may vary depending on user usage.

Start up your Device

Power on

Press the Power button, and release it after seeing boot android robot.

Power off

1. Press and hold Power button.
 2. Click power off.
- Press confirm to power off. Then the screen reveals a power off notification. Once the notification disappears and blacks out, the device is fully powered off.

Sleep

Short Press Power button, to wake up the device to resume to normal mode.

Home Screen



Back Open the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you can't go back any further in your history.

Home Open Home. If you're viewing a left or right Home screen, opens the central homescreen.

Recent Apps Opens a list of thumbnail images of apps you've worked with recently. To open an app, touch it. To remove a thumbnail from the list, swipe it left or right.

Note: After a short time without getting used, these buttons may shrink to dots or fade away, depending on the current app. To bring them back, touch their location.

All Apps Touch it to see all your apps and widgets.

Search Type what you want in the search bar.

Status & System Status icons on the left tell you which apps have sent you notifications; e.g. that a message has arrived, or it's time for a meeting. **System icons** on the right display the current wireless and network connection strength, battery level, time, and more.

All Apps & Widgets



All Apps You can move app icons to any of your Home screens.

To remove an app icon from the Home screen, touch and hold it, slide your finger toward the top of the screen, and drop the app over the **Remove icon**.

Note: The All Apps icon in the Favorites tray is permanent. You can't move it.

Widgets They are like windows into your apps. To see your widgets, touch Widgets at the top of the screen.

From the main Widgets screen, you can

- Move between screens: Swipe left or right.
- Drag a widget to a Home screen: Touch and hold the widget's icon, slide your finger where you want to place it, and lift your finger.

You may be asked to make further choices before the widget activates. If there isn't room where you dropped it, the widget won't get added to the Home screen.

1

2

3

4

5

Change the Wallpaper



1. Touch & hold anywhere on a Home screen that's not occupied. A list of options appears.
2. Touch a wallpaper source:

Live Wallpapers Choose from a scrolling list of animated wallpapers.

Super-HD Player Choose from pictures that you've taken with Camera or downloaded to your device.

Wallpapers Choose from thumbnails of default images, or touch a thumbnail for a larger version. You can download additional wallpapers from Android Market.

3. To set an wallpaper, touch "set wallpaper" under the Gallery images or Set wallpaper.

Use Folders

You can combine several app icons in a folder. Drop one app icon over another on a Home screen, and the two icons will be combined.



From any Home screen, you can

- **Open a folder:** Touch it. The folder opens.
- **Rename a folder:** Touch its name.
- **Move icons around your Home screens:** Touch, hold, and slide.

Tips:

- To see a smaller collection of frequently used apps, touch the Google Apps folder near the bottom of the screen. As with any folder, you can customize its contents.
- After you open an app, you can usually adjust its settings by choosing items from its Menu icon near the top or bottom of the screen.

Use Your Camera



The Camera app is a combination camera and camcorder.

You can view photos and videos you take with

Camera in the Super-HD Play app, along with movies that you rent or download.

To take pictures and videos, first touch the

Camera icon on a Home or All Apps screen.

When Camera opens, you can

- Take a picture: Touch the blue button.
- View the most recently taken picture: Touch the thumbnail near the blue button.

You can now share the picture by touching the Gmail, Google+, Messenger, or other icons

Manage Downloads

Files, apps, and other items you download from Gmail, Email, Android Market, or in other ways are stored in your device's internal storage. You can use the Downloads app to view, reopen, or delete what you've downloaded.

Some mobile networks restrict the size of the files you can download, to manage the demands on their networks or to help you avoid unexpected charges. When you try to download an oversized-file when connected to such networks, you may be required to delay downloading until your device is connected to a Wi-Fi network, when the download will resume automatically. You can view and manage these queued files in the Downloads app as well. Downloaded files are stored in the Download directory that's visible when your device is connected to a computer. You can view and copy files from this directory.

Open Downloads and Manage Downloaded Files

Touch the Downloads icon on a Home or All Apps screen.

Touch an item to open it.

Touch headings for earlier downloads to view them. Check items you want to share. Then touch the Share icon and choose a sharing method

Settings – Wi-Fi

Connect to Wi-Fi networks



Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 300 feet, depending on the Wi-Fi router and your surroundings. To extend the life of your battery between charges, turn off Wi-Fi when you're not using it.

Turn Wi-Fi on & Connect to a Wi-Fi Network

If you're adding a Wi-Fi network when first setting up your device, Wi-Fi is turned on automatically.

- 1 Touch the Settings icon on a Home or All Apps screen.
- 2 Touch **Wireless & networks > Wi-Fi**.
- 3 Slide the Wi-Fi switch to the On position.

The device scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon. If the device finds a network that you connected to previously, it connects to it.

Settings – Wi-Fi

Add a Wi-Fi Network

You can add a Wi-Fi network so your device will remember it, along with any security credentials, and connect to it automatically when it's in range. You must also add a Wi-Fi network if the network does not broadcast its name (SSID), or to add a Wi-Fi network when you are out of range.

To join a secured network, you first need to learn security details from the network's administrator.

- 1 Turn on Wi-Fi, if it's not already on.
- 2 In the Wi-Fi settings screen, touch **Add Network**.
- 3 Enter the SSID (name) of the network. If necessary, enter security or other network configuration details.
- 4 Touch **Save**.

The information about the network is saved. Your device will connect to this network automatically the next time you come within range.

Forget a Wi-Fi Network

You can make the device forget about the details of a Wi-Fi network that you added; for example, if you don't want the tablet to connect to it automatically or if it's a network that you no longer use.

- 1 Turn on Wi-Fi, if it's not already on.
- 2 In the Wi-Fi settings screen, touch the name of the network.
- 3 Touch **Forget** in the dialog that opens.

11

Manage Accounts

Add or Remove Accounts

You can use multiple Google Accounts and Microsoft Exchange ActiveSync accounts on your device.

You may also be able to add other kinds of accounts, depending on your apps. Some you can add in the **Accounts & Sync** screen, as described here. Others you add using an app that works with those kinds of accounts. For example, you can add IMAP and POP3 email accounts with the **Email** app.

To view the **Accounts & sync** settings screen described here:

- 1 From a **Home** or **All Apps** screen, touch the **Settings** icon.
- 2 Under **Personal**, touch **Accounts & sync**.

Add an Account

To add some accounts, you may need to obtain details from system administrator about the service to which the account connects. For example, you may need to know the account's domain or server address.

- 1 Go to **Settings > Personal > Accounts & sync**.
- 2 Touch **Add account**.
- 3 Touch the kind of account to add.
- 4 Follow the onscreen steps to enter information about the account.

Most accounts require a username and password, but the details depend on the kind of account and the configuration of the service you're connecting

Settings – Wi-Fi

Configure Proxy Settings for a Wi-Fi Network

Some network administrators require you to connect to internal or external network resources via a proxy server. By default, the Wi-Fi networks you add are not configured to connect via a proxy, but you can change that for each Wi-Fi network you've added.

Proxy settings are used by **Browser** but may not be used by other apps.

- 1 Touch & hold a network in the list of Wi-Fi networks you've added.
- 2 Touch **Modify network** in the dialog that opens.
- 3 Select **Show advanced options**.
- 4 If the network has no proxy settings, touch **None** under **Proxy Settings**, then touch **Manual** in the menu that opens.
- 5 Enter the proxy settings supplied by your network administrator.
- 6 Touch **Save**.

The proxy settings apply only to the Wi-Fi network you modified. To change the proxy settings for other Wi-Fi networks, modify them individually.

12

Manage Accounts

Remove an Account

You can remove an account to delete it and all information associated with it from your device, including email, contacts, settings, and so on.

- 1 Go to **Settings > Personal > Accounts & sync**.
- 2 Touch the account to delete.
- 3 Touch **Menu icon > Remove account**.

Related topics

Configure account sync options
Why use a Google Account?

Configure Account Sync Options

You can configure synchronization options for any of your apps. You can also configure what kinds of data you synchronize for each account. Some apps, such as **Gmail** and **Calendar**, have separate synchronization settings that provide more fine-grained control. In such cases, the settings you select at the account level are still valid. For some accounts, syncing is two-directional; changes that you make to the information on your device are made to the copy of that information on the web. Your **Google Account** works this way. Other accounts support only one-way sync: the information on your mobile device is read-only. To view the **Accounts & sync** settings screen described here:

- 1 From a **Home** or **All Apps** screen, touch the

Settings – Wi-Fi

Set Wi-Fi Notifications, Disconnect Policy, and other Advanced Options

To work with advanced Wi-Fi settings:

- 1 Turn on Wi-Fi, if it's not already on.
- 2 In the Wi-Fi settings screen, touch the **Menu icon** and choose **Advanced**.

These are the settings you can adjust:

- **Network Notification:** By default, when Wi-Fi is on, you receive notifications in the **Status bar** when your device detects an open Wi-Fi network. Uncheck this option to turn off notifications.
- **Avoid Poor Connections:** Check to automatically avoid using networks with a low-quality or intermittent Internet connection.
- **Keep Wi-Fi during Sleep:** To conserve mobile data usage, your device stays connected to Wi-Fi when the screen goes to sleep. Touch this option to change this default behavior: either to stay connected to Wi-Fi only when the device is connected to a charger (when battery life isn't a problem), or never to stay connected to Wi-Fi during sleep. The latter choice is likely to increase mobile data usage. You may want to revisit this setting if you receive a notification that you're approaching your specified mobile data limit.
- **Wi-Fi Frequency Band:** Specify **Automatic**, **5 GHz**, or **2.4 GHz** frequency bands. This screen also displays the following information:
 - **MAC Address:** The **Media Access Control (MAC)** address of your device when connected to a Wi-Fi network.
 - **IP Address:** The **Internet Protocol (IP)** address assigned to the device by the Wi-Fi network you are connected to (unless you used the IP settings to assign it a static IP address).

Related settings:

- **Settings > Wireless & networks > Wi-Fi**
- **Settings > Wireless & networks > Data usage**

13

Manage Accounts

Configure General Sync Settings

1 Go to **Settings > Personal > Accounts & sync**. Indicates that some or all of an account's information is configured to sync automatically. Indicates that none of an account's information is configured to sync automatically.

2 Check or uncheck **Menu icon > Auto-sync app data** to control whether changes you make to information on your device or on the web are automatically synced with each other. If you turn off **Auto-sync**, you need to sync manually to collect messages, email, and other recent information, and won't receive notifications when updates occur.

For example, when this option is checked, changes that you make in your **People** app are automatically made to your **Google contacts** on the web. If this option is not checked, you may be able to use an application's tools to sync data manually. You can also sync manually to collect messages, email, and other recent information. Leaving **Auto-sync** off can help extend your battery life, but will prevent you from receiving notifications when updates occur.

Sync information manually

- 1 Go to **Settings > Personal > Accounts & sync**.
- 2 Touch the account whose data you want to sync.
- 3 Touch **Menu icon > Sync now**.

Change an Account's Sync Settings

- 1 Go to **Settings > Personal > Accounts & sync**.
- 2 Touch the account whose sync settings you want

Connect to Keyboards, Mice and other Devices

You can connect a keyboard, mouse, or even a joystick or other input device to your tablet via USB and use it just as you would with a PC.

You may need an adapter to connect the keyboard or other device to your tablet's USB port. To connect more than one USB device at a time, use a powered USB hub to reduce the drain on your tablet's battery.

Keyboards

In addition to entering text, you can use your keyboard to navigate your tablet's features:

- Use the arrow keys to select items on screen.
- Pressing **Return** when an item is selected is equivalent to touching that item.
- Pressing **Escape** is equivalent to touching **Back**.
- Press **Tab** or **Shift-Tab** to move from field to field in a form or other screen with multiple text fields.

Mice

When you connect a mouse to your tablet and move the mouse, an arrow-shaped cursor appears, just as on a computer:

- Use the mouse to move the cursor.
- Clicking, pressing, and dragging with the mouse button is equivalent to touching, touching & holding, and dragging with your finger.
- Only one mouse button is supported.

Other Input Devices

You can input other devices to your tablet. However, games and other apps must be designed to support any special features of an input device, such as dedicated buttons or other controls, to take full advantage of them.

14

Secure your Tablet

Set Screen Lock

Depending how you use your Tablet, you may want to set some form of automatic screen lock to prevent unauthorized access. If a screen lock has been set, the screen locks when your tablet's display goes to sleep.

To adjust your tablet lock settings:

- 1 From a **Home** or **All Apps** screen, touch the **Settings** icon.
- 2 Touch **Personal > Security > Screen lock**.
- 3 Touch the type of lock you want and follow the onscreen instructions.

You can choose among these lock options, listed in approximate order of strength:

Slide provides no protection, but lets you get to the **Home** screen quickly, or open **Camera** and start taking pictures immediately.

Pattern lets you draw a simple pattern with your finger to unlock the phone.

Password requires four or more letters or numbers. This is the most secure option, as long as you create a strong password. Important For best security, specify a password that is at least 8 characters long. Contains a mixture of numbers, letters, and special symbols

Doesn't contain any recognizable words or phrases.

Connect to a Windows Computer via USB

You can use a USB cable to connect your tablet to a Windows computer and transfer music, pictures, and other files in both directions.

When you connect your tablet to the USB port on your computer, its USB storage is mounted as a drive and appears on your computer screen. You can now copy files back and forth as you would be using any other external device.

When you're finished, simply disconnect the tablet by unplugging the USB cable.

Related settings:

- **Settings > Device > Storage > Menu > USB computer connection**.

USB Connection

Connecting the device to PC via USB cable instruction as follows: **Settings > Developer options > USB debugging** **USB Debugging**

Use your Device as Storage Card

To save some files on your device, you need to set the USB mode.

Connect your device with USB cable.

Open **Notification menu** and click **USB connected**. Click **Turn on USB storage device** and confirm it.

Note: When USB storage device is turned on, some applications will be unavailable, including camera, music player, etc.

To close the USB mode, click **Turn off USB storage** on the screen.

15

Frequently Asked Questions Treatment

1. What is Android?

A: Android, which is the open source Linux-based operation system name, that Google announced on November 5, 2007.

2. What is APK?

A: APK is Android Package acronym, that is Android installation package.

3. How to obtain the APK?

A: You can go to "Android Market" online to download and install, also you can download via PC-side installation.

4. Can the machine charge through USB?

A: Yes. This machine can be charged by USB to PC or AC charger 5V 2A. Charging by AC charger will be much faster than by USB.

5. Why some downloaded APK when installed, can't work?

A: Some downloaded APKs can't work, it's because most of them are developed by user, which is without platform compatibility testing, and some APK has special demand on firm ware and Android OS version. If not working properly or this is not the device quality problem.

6. How to uninstall APK from Tablet PC?

A: On **Home** screen or **All App** screen, Click "Settings", then you find "Application", Click "Manage Application", find what you want to uninstall then click "uninstall".