


W8729 - All Purpose Equipment Cart™

Assembly Instructions

Components:

- A – Wheeled Base (1)
- B – Lower Vertical Post (4)
- C – Horizontal Mid Section (1)
- D – Vertical Panels (2) – includes 2 vertical post and fabric panel
- E – Top Section (1)
- F – Bungee Cords (16) – 35" long (includes 2 extra cords)
- G – Bungee Cords (2) – 48" (optional vertical cords) not shown

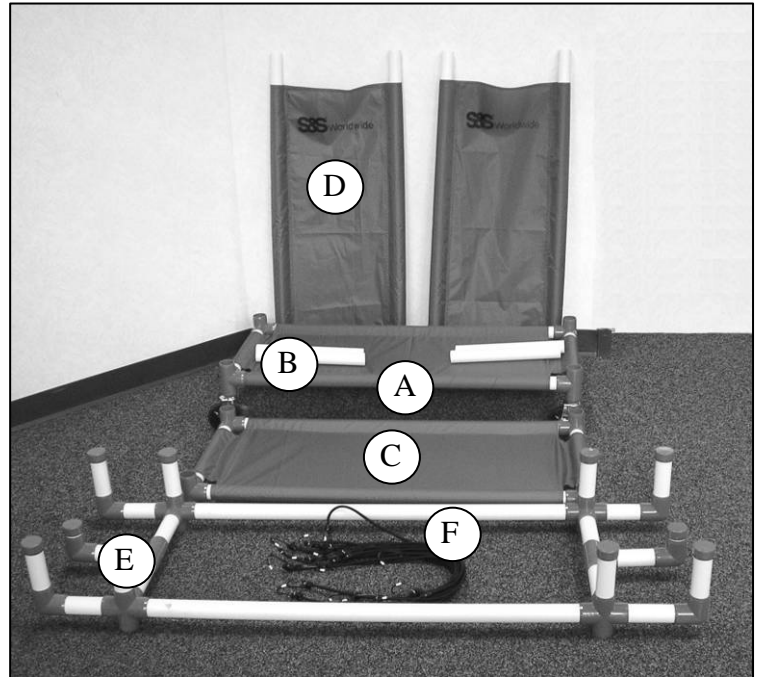


Instructions:

1. Insert a short vertical post "B" into each corner of the wheeled base "A"



2. Place horizontal mid section "C" over the 4 short vertical post and press down.

3. Insert a vertical panel "D" at either end of the cart by inserting one post into each corner of the horizontal mid section "C". Be sure that the holes in the vertical post are aligned with the holes in the vertical fabric panels and that the holes are towards the outside of the cart.

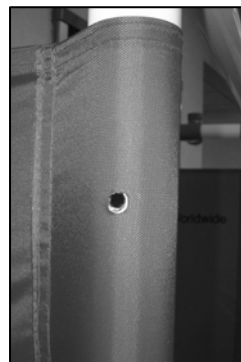

4. Position the top section “E” over the 4 vertical posts and push down.

5. Attach 7 bungee cords “F” to each side of the cart by insert the metal end of the cord into the hole in the post, stretching the cord across the cart and inserting the other metal end into the opposite vertical post.



6. **Optional Vertical Cords** – If balls are squeezing between the horizontal bungee cords when moving the cart, you can reduce or eliminate this issue by using the 2 extra 48” bungee cords. Attach one of these cords to the hole in the center of the top horizontal post. Weave and wrap the cord around each horizontal cord and then insert the bottom hook on the cord into the hole in the center of the horizontal post.

