

Reorder No. GA-2237 AIRPLANE I

PLEASE READ ALL DIRECTIONS BEFORE STARTING

YOUR PACK CONTAINS:

Precut, preprinted wood parts (1 sheet) Instructions


YOU WILL NEED: Paper for your work surface, sandpaper, soft cloth, paint, brush.

- Carefully press each wood part from the sheet.
 Some parts may have small pieces which must be pressed out, such as the slots in the body for the wings.
- Sand around the edges of the wood parts until smooth. Do not sand the flat sides. Test-fit the lettered tabs into the proper slots. Sand the tabs and slots if necessary so they will fit together. Remove dust with the soft cloth.

BODY ASSEMBLY:

Note: Wipe away any excess glue with the cloth as you are working

a. Glue the two parts of the airplane body together matcing up the slots for the wings.
b. Apply glue to the "E" slot at the nose of the plane. Slide the piece lettered "E" into the "E" slot.
Let dry 20 minutes.

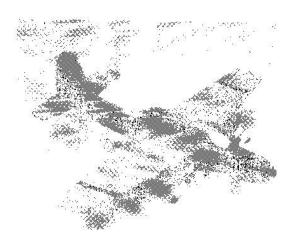

WING ASSEMBLY:

4.

- a. Apply glue to the center top of the tail wing between the letters "C" and "D". Slide the tail wing into the "C-D" slot at the tail of the plane matching up the letters.
- b. Apply glue to the center top of the front wing between the letters "A" and "B". Slide the front wing into the "A-B" slot in the body of the plane matching up the letters.
- c. Glue the engine/wheel parts together matching up the tabs and slots.
- d. Apply glue to the "G" and "F" slots in the tops of the engines. Slide the engines onto the front of the wing matching up the letters.
- e. Apply glue to the "H" tabs at the fronts of the engines. Slide the propellers onto the "H" tabs. Let dry 20 minutes.

Paint the plane as desired. Let dry 30 minutes.

Airplane I - Reorder No. GA-2237 Call Toll-Free 1-800-243-9232 or Mail Your Order to: S&S Arts & Crafts, P.O. Box 513, Colchester, CT 06415-0513 FAX # 203-537-2866 Customer Service 1-800-937-3482