

WD780

Tool Box

PLAY. LEARN. SHARE.

ssww.com/blog

Find ideas on the S&S Blog:

- Crafts & DIY
- Senior Activities
- Summer Camp
- Education & Classroom



MAKING IT EASY to SAVE MORE on your next order!

15% OFF

No \$ Minimum

Please mention Offer Code: **M2467**

Limit one per order.

May not be combined with other offers or bid or contract pricing.

See ssww.com for Offer Terms and Conditions.

We reserve the right to terminate this offer at any time without notice.

Call Toll-Free
1-800-243-9232

Online:
SSWW.COM

Email:
cservice@ssww.com

FAX:
1-800-566-6678

S&S Worldwide

© Copyright 2018 S&S® Worldwide Inc. All rights reserved.
No part of this project may be copied or duplicated without the express written permission of S&S Worldwide.

Kit may contain silicone gel packets, which should be removed before use.

Reorder Number

WD780


1.1

S&S® Worldwide

MAKING IT EASY
to Help People Play and Learn Since 1906

Tool Box

PLEASE READ ALL INSTRUCTIONS BEFORE STARTING

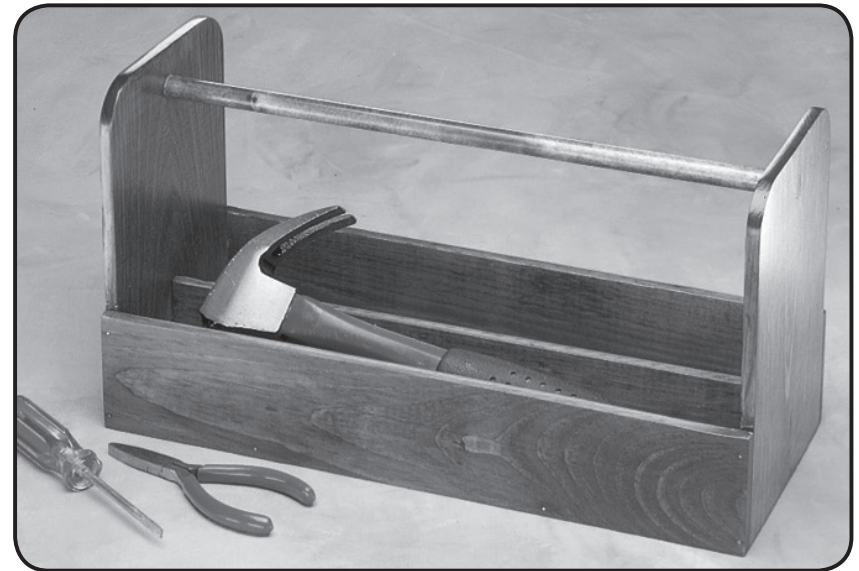

PREP TIME: 5 minutes

PROJECT TIME: 45 minutes

YOUR KIT CONTAINS:

- Precut Wood Pieces
- Sandpaper
- Nails

YOU WILL NEED:

- Soft Cloth
- Paint or Stain
- Brushes
- Hammer
- Glue
- Flat Work Surface

INSTRUCTIONS:

1. Sand all wooden parts until smooth. Test the dowel to see that it fits into the holes in the end pieces. Sand the ends if necessary until they fit.
2. Stain or paint the wood parts if desired. Let dry.
3. Apply a small amount of glue around the insides of the holes in the end pieces. Push the dowel into the holes until the ends are flush with the outsides.
4. Glue and nail the bottom piece in between the bottoms of the end pieces. Glue and nail the center divider into place. Glue and nail the long sides to the bottom and end pieces. Let dry completely before using.

GENERAL WOOD INSTRUCTIONS:

SANDING

The rule of sanding is "Never across the grain."

1. Do not tear sandpaper. If you do, the ragged edges will often scratch the wood surface.
2. For flat surfaces, wrap a piece of sandpaper around a block of wood or use a store bought holder. Start with a coarse grade of paper and finish with a fine grade paper (not included).
3. Be consistent. Do not sand one area with fine paper and another with coarse grade paper.

STAINING

1. Be sure the wood surface is smooth and clean. Stains can accentuate any roughness or scratches of cross grain sanding. Wipe off any dirt or dust with a soft cloth.
2. A base coat of sealer/primer and a light sanding before applying stain will ensure a uniform stain.
3. Apply stains in one direction following the wood grain. Use a soft brush or foam brush. Let the stain penetrate the wood, then wipe off excess stain with a soft cloth.
4. If stain looks too dark, dampen the cloth with water/thinner and wipe until you achieve the desired color. If stain is too light, let dry, then apply another coat of stain and wipe off.

FINISHES

1. Outdoor projects may be finished with polyurethane or varnish. ***These are toxic and must be used in a well ventilated area.*** Indoor projects may be finished with decoupage or left unfinished.