General Wood Instructions

Sanding

The rule of sanding is "Never across the grain".

- 1. Do not tear sandpaper. If you do, the ragged edges will often scratch the wood surface.
- 2. For flat surfaces, wrap a piece of sandpaper around a block of wood or use a store bought holder. Start with a coarse grade of paper and finish with a fine grade of paper(not included).
- 3. Be consistent. Do not sand one are with fine and another with coarse grade.

Staining

- 1. Be sure the wood surface is smooth and clean. Stains can accentuate any roughness or scratches of cross grain sanding. Wipe off any dirt or dust with a soft cloth.
- 2. A base coat of sealer/primer and a light sanding before applying stain will insure a uniform stain.
- 3. Apply stains in one direction following the wood grain. Use a soft brush or foam brush. Let the stain penetrate the wood, then wipe off excess stain with a soft cloth.
- 4. If stain looks too dark, dampen the cloth with water/thinner and wipe until you achieve the desired color. If stain is too light, let dry, then apply another coat of stain and wipe off.

Finishes

1. Outdoor projects may be finished with polyurethane or varnish.

These are toxic and must be used in a well ventilated area. Indoor projects may be finished with decoupage or left unfinished.

Safety First!

This Product May Contain Silicon Gel Packets.

REMOVE PRIOR TO USE!

COVERED WAGON WD3207



CALL TOLL-FREE 1-800-243-9232

or **Mail Your Order** to: S&S Worldwide PO Box 513

Colchester, CT 06415-0513 FAX #: 1-800-566-6678

Customer Service: 1-800-937-3482

Internet home page address: http://www.ssww.com


Email address: service @ssww.com

Item No. WD3207

Made in China

COVERED WAGON

PLEASE READ ALL INSTRUCTIONS BEFORE STARTING

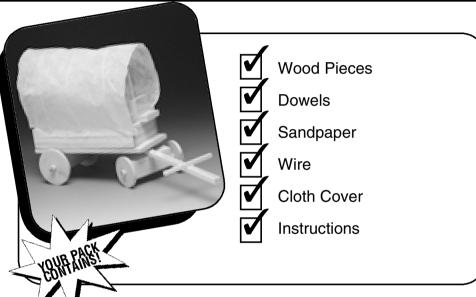

YOU WILL NEED...

Wood Glue Protected Work Surface Paint or Stain Brushes PREP TIME: 5 MiN

PROJECT TIME: 30 MiN plus glue dry time





CHOKING HAZARD - 5mall parts. Not intended for children under 3 years.

SUFFOCATION HAZARD - To avoid danger of suffocation, keep plastic bags away from bables and children. Do not use bags in cribs, carriages, or playpens.





Prep Instructions:

➤ Check all parts of proper placement. For best results, sand and paint before assembly, avoiding areas to be glued. Glue where you see this symbol: ○.

Product Instructions:

- Glue both sides A and B together to make the chassis C, making sure all the holes in A are showing.
- Insert a nail into the hole at the tip of the hitch bar that you will glue perpendicular to the place E so as to cover the nail head. Allow to dry. Glue the 2nd piece E to the rear.

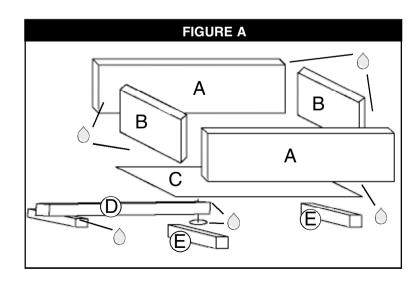

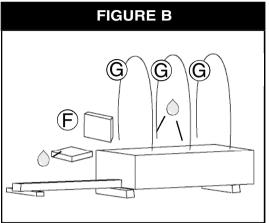

- Glue all three wires G into the holes of the sides A.
- F together to make the seat and glue it to the top of the front piece B.

- Glue 2 wheels to each axel. Insert each axel into an axel housing H that you will glue to a piece E. Axles may need to be sanded on the ends to fit, or you can use a hammer and lightly tap them in.
- Shape the cloth to fit around the wires and glue it to them and to the sides A.

