



WALL-MOUNT GOAL SYSTEMS

ASSEMBLING INSTRUCTIONS AND OWNER'S MANUAL

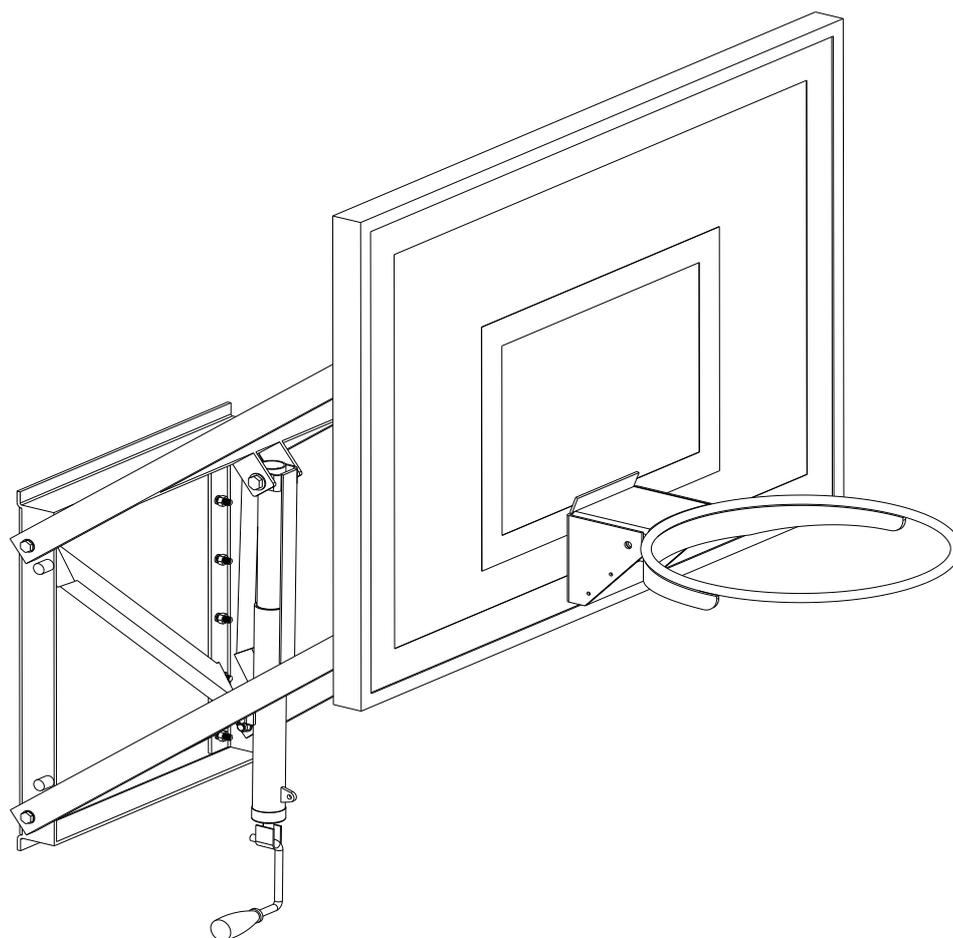

Keep this instruction manual in case you have to contact the manufacturer for replacement parts.

Required For This Step:

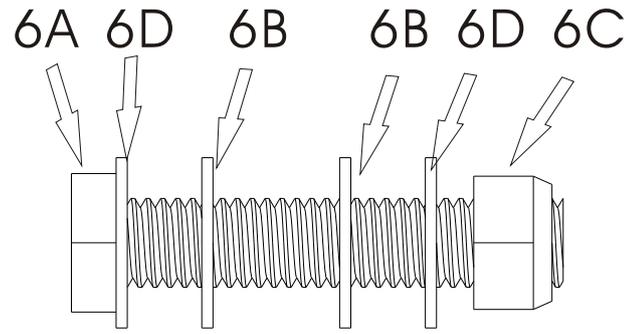


STEP 1

A: Determine where to place frame on mounting surface.

B: Draw a 21" (533mm) horizontal line on the mounting surface 88-4/5" (2255mm) up from playing surface, also level frame (1) horizontally and vertically using a level.

C: Mark wall mounting holes needed for attachment of frame.

D: Set frame down, and drill holes through the metal expansion bolt (0A) as needed in mounting surface, then using flat washers (0B), lock washers (0C) and nuts (0D) as shown.

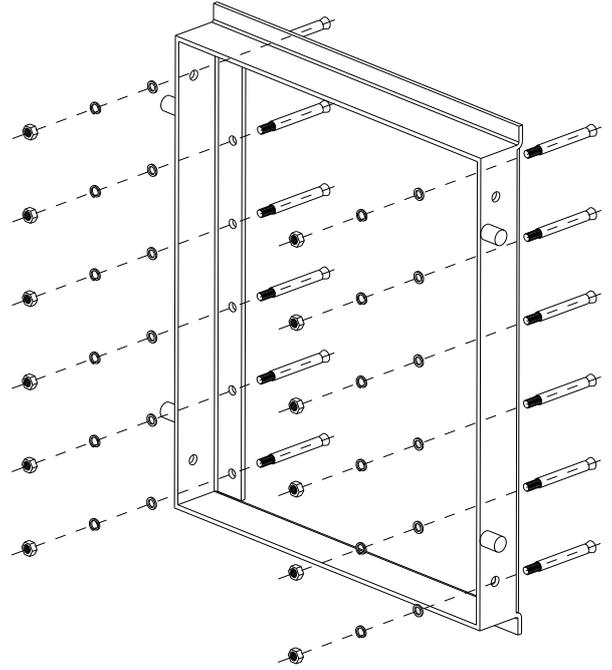


Step2



A: Attach upper jack mounting (2) to upper extension arm (4) to frame (1). Using two m12*60 bolts (6A), four flat washers (6B), four nylon washers (6D), and two locknuts (6C) as shown. (do not fully tighten for fear to adjust.)

B: Attach lower jack mounting brackets (3) and lower extension arm (5) to frame (1). Use two m12*60 bolts (6A), four flat washers (6B), four nylon washers (6D) and two locknuts (6C) (do not tighten.)

C: Tighten all frame assembly fasteners, but make sure free movement is maintained at pivot points

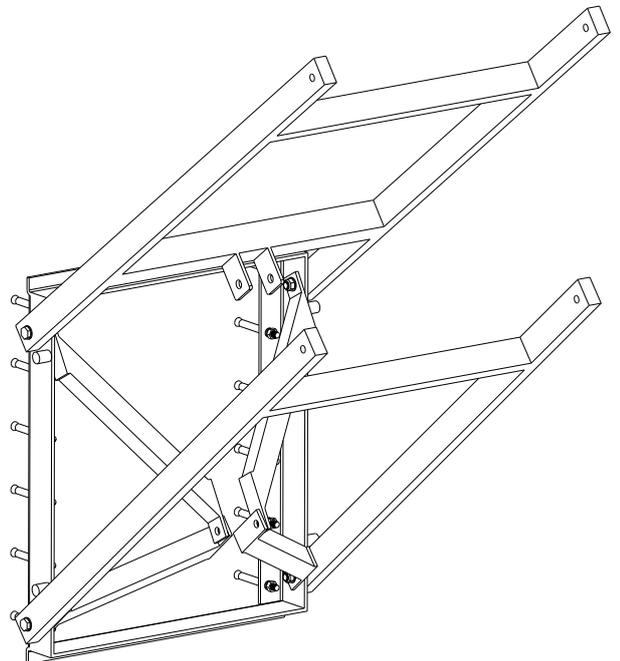


Required For This Step:

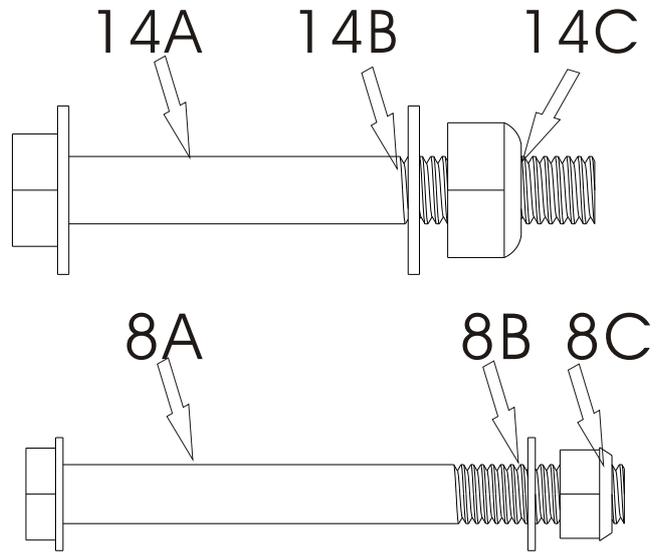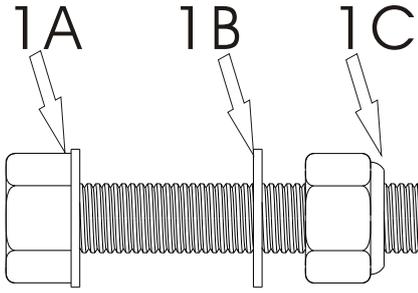

Step3


A: To set the Adjust equipment to the proper initial length for your fixed goal, lengthen or shorten until the overall length, using bolt (14A) (14*100), a flat washer (14B) and locknut (14C) through the upper extension arm.

B: Using the bolta (8A) (m12*120), a flat washer (8B) and locknut (8C).


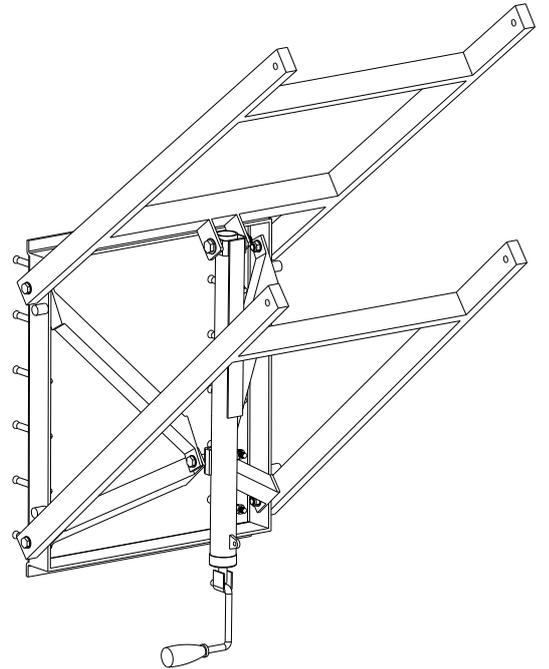


Step4

A: Remove backboard (9) from box, using the bolt (1A), a flat washer (1B) and locknut (1C) as shown.

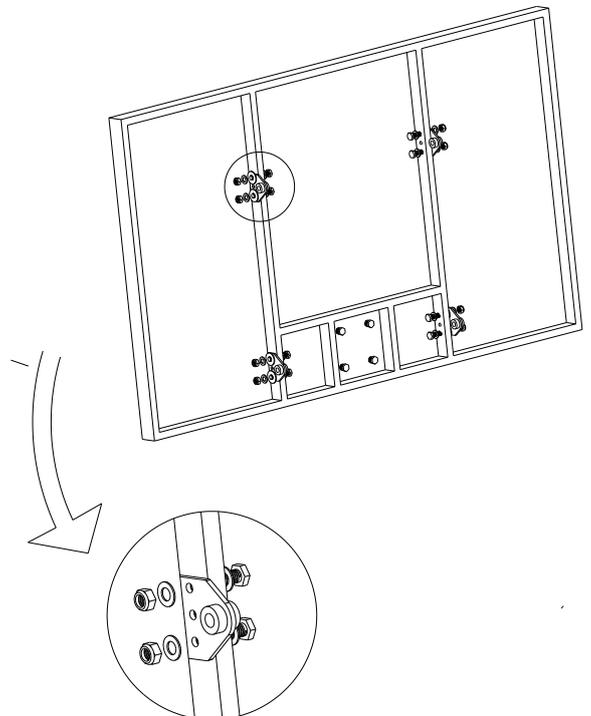

Required For This Step:

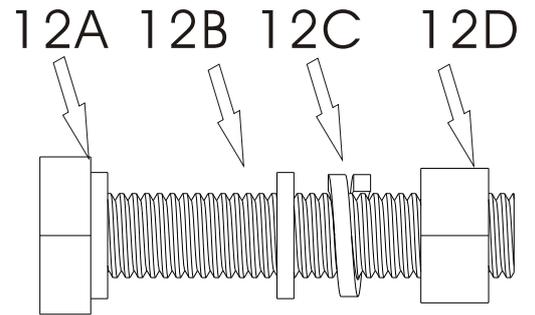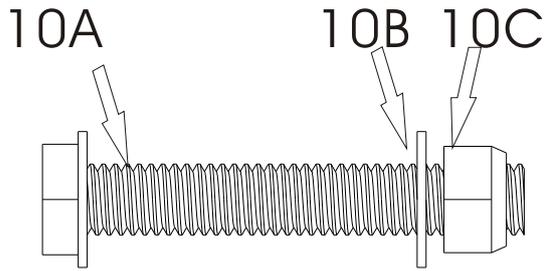


Step 5

Note: Make sure extension arms are in lowered position.


A: Secure the backboard to the main extension arm lift into position and attach to the extension arms (4&5) with four bolts (10A) (m12*75) eight flat washers (10B) and four locknuts (10C) (Do not overtighten).



B: Tighten so that bushings in arms meet bushings in backboard.

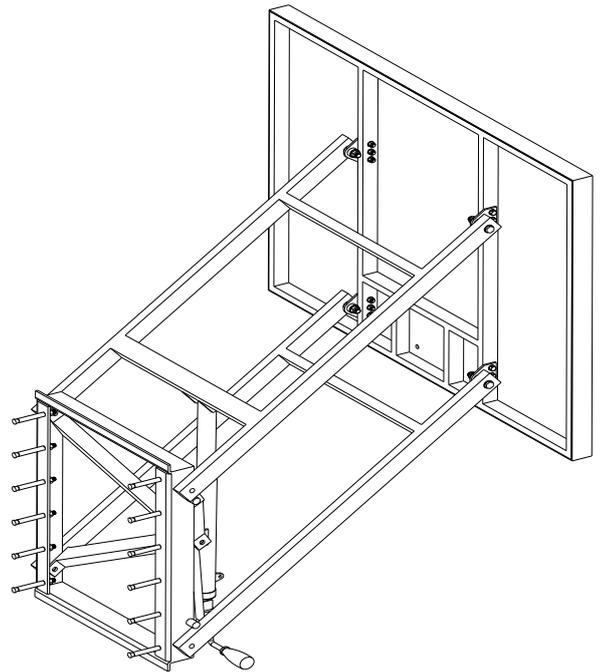

Step 6

A: Loosely attach rim to backboard through top mounting holes with two bolts (12A) (m10*50), four flat washer (12B), two lock washers (12C) and two nuts (12D).

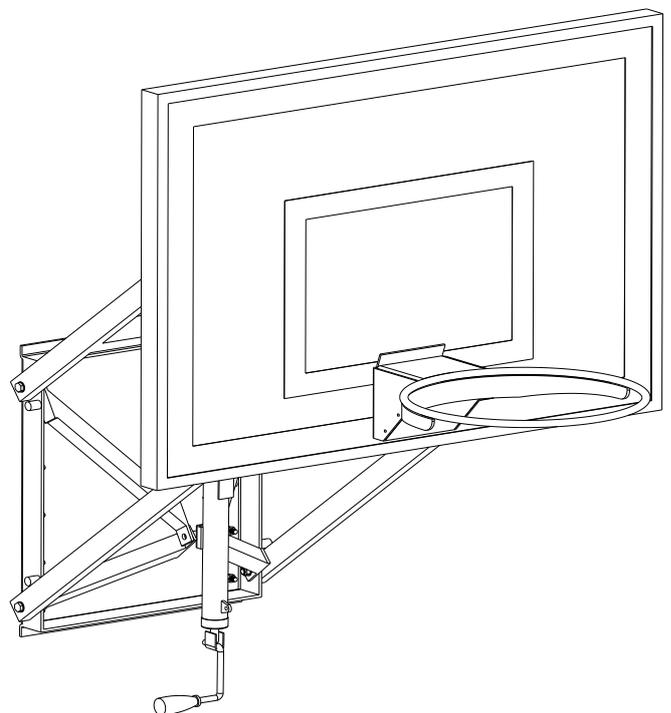

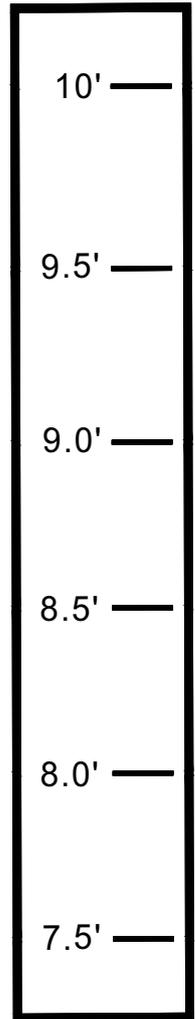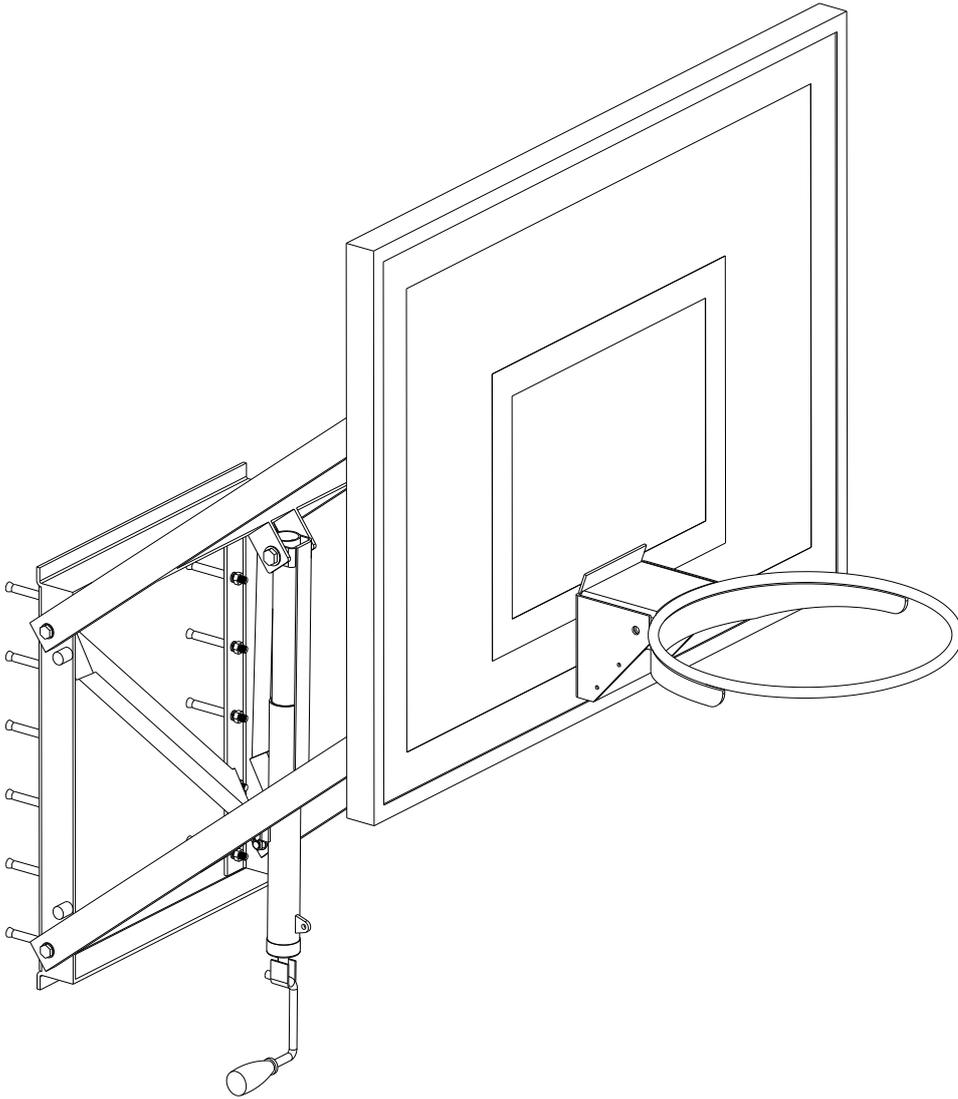

Step 7

A: Position top of rim 10' above playing surface using crank handle. Measure distance with a tape measure for accuracy.

B: When the crank handle adjusted to the highest point, you can see 10' mark in the stickers.

C: Make sure every step you fully tighten the fasteners.